


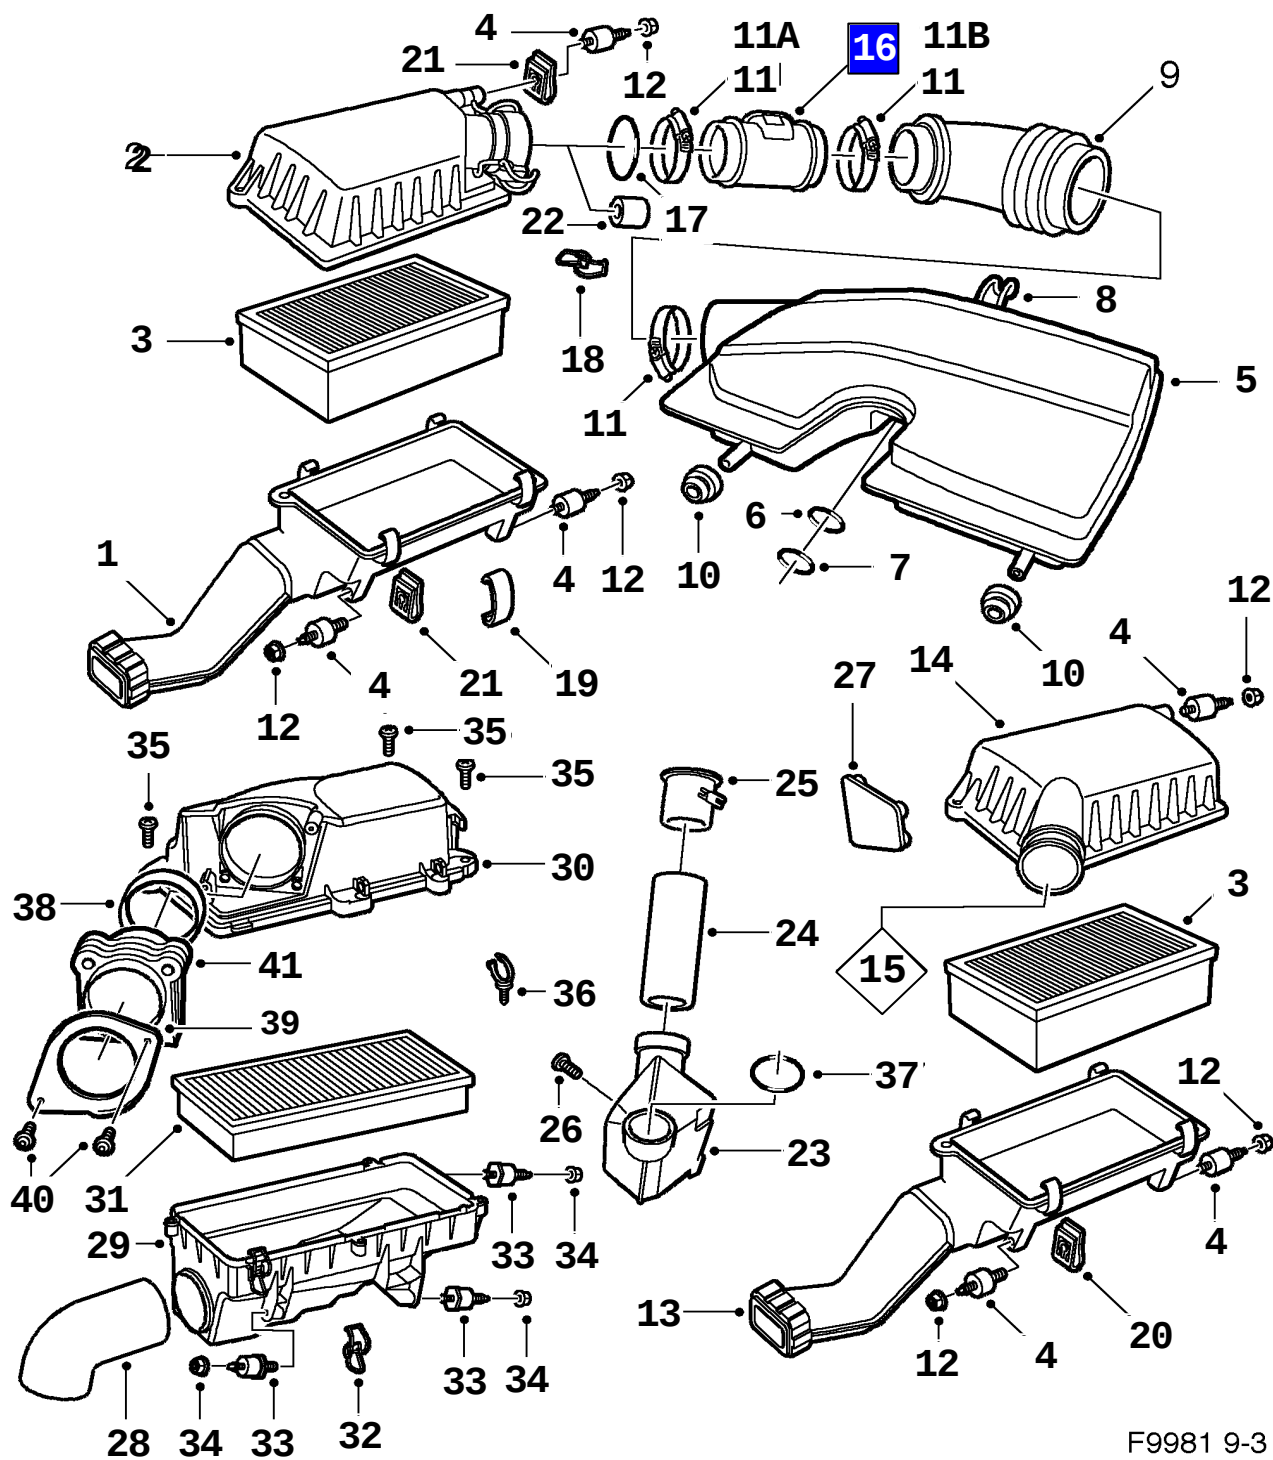

0490 Sistema de combustible - Filtro de aire (1998 - 2000), 4-CYL				
Pos	Pieza N°.	Artículo	Utilización	Cto
1	42 36 014	Filtro de aire	I	1
1	48 76 165	Filtro de aire	DIESEL	1
2	42 36 022	Filtro de aire	I	1
2	48 76 157	Filtro de aire	DIESEL	1
3	42 36 030	Patrón filtrante		1
3	48 76 199	Patrón filtrante	DIESEL	1
4	42 35 768	Espaciador de goma		3
5	42 35 230	Silenciador	I	1
6	42 29 522	•Anillo tórico		1
7	42 29 530	•Anillo tórico		1
8	42 29 548	•Abrazadera		1
9	42 35 222	Manguera	I	1
9	45 27 610	Acodadura del tubo	DIESEL	1
10	40 27 488	Buje de goma		2
11	79 70 155	Abrazadera de la manguera		2
11A	79 70 171	Abrazadera de la manguera	DIESEL	1
11B	79 70 163	Abrazadera de la manguera	DIESEL	1
12	43 45 138	Tuerca hexagonal		3
13	42 36 014	Filtro de aire	TURBO	1
14	42 36 089	Filtro de aire	TURBO	1
15		Manguera	Ir a 2 - 1420	1
16	47 80 185	Contador de la masa de aire		1
16	46 62 888	Contador de la masa de aire	DIESEL	1
17	41 56 295	Anillo tórico	I	1
17	48 76 173	Retén	DIESEL	1
18	44 45 854	Clip		2
19	44 45 862	Clip		4
19	48 76 181	Clip	DIESEL	3
20	44 45 847	Clip		3
21	44 45 847	Clip		2
22	48 76 629	Manguera		1
23	42 29 563	Silenciador	DIESEL, B205, B235	1
24	42 36 147	Manguera	DIESEL, B205, B235	1
25	42 36 154	Mango de conexión	DIESEL, B205, B235	1
26	79 77 465	Tornillo	DIESEL, B205, B235	1
27	43 38 679	Adaptador	DIESEL, B205, B235R	1
28	48 76 041	Toma de aire	B205, B235R	1
29	48 76 058	Caja del filtro de aire	B205, B235R	1
30	48 76 066	Tapa	B205, B235R	1
31	48 76 074	Filtro de aire	B205, B235R	1
32	49 62 296	Abrazadera	B205, B235R	1
33	46 71 863	Espaciador de goma	B205, B235R	3
34	43 45 138	Tuerca hexagonal	B205, B235R	3
35	49 62 304	Tornillo	B205, B235R	4
36	49 62 726	Clip	B205, B235R	2
37	42 29 704	Anillo tórico		1
38	48 78 187	Anillo tórico	B205, B235R	1
39	48 76 090	Consola	B205, B235R	1
40	40 87 938	Tornillo	B205, B235R	2
41	91 73 386	Contador de la masa de aire	B205, B235R	1