


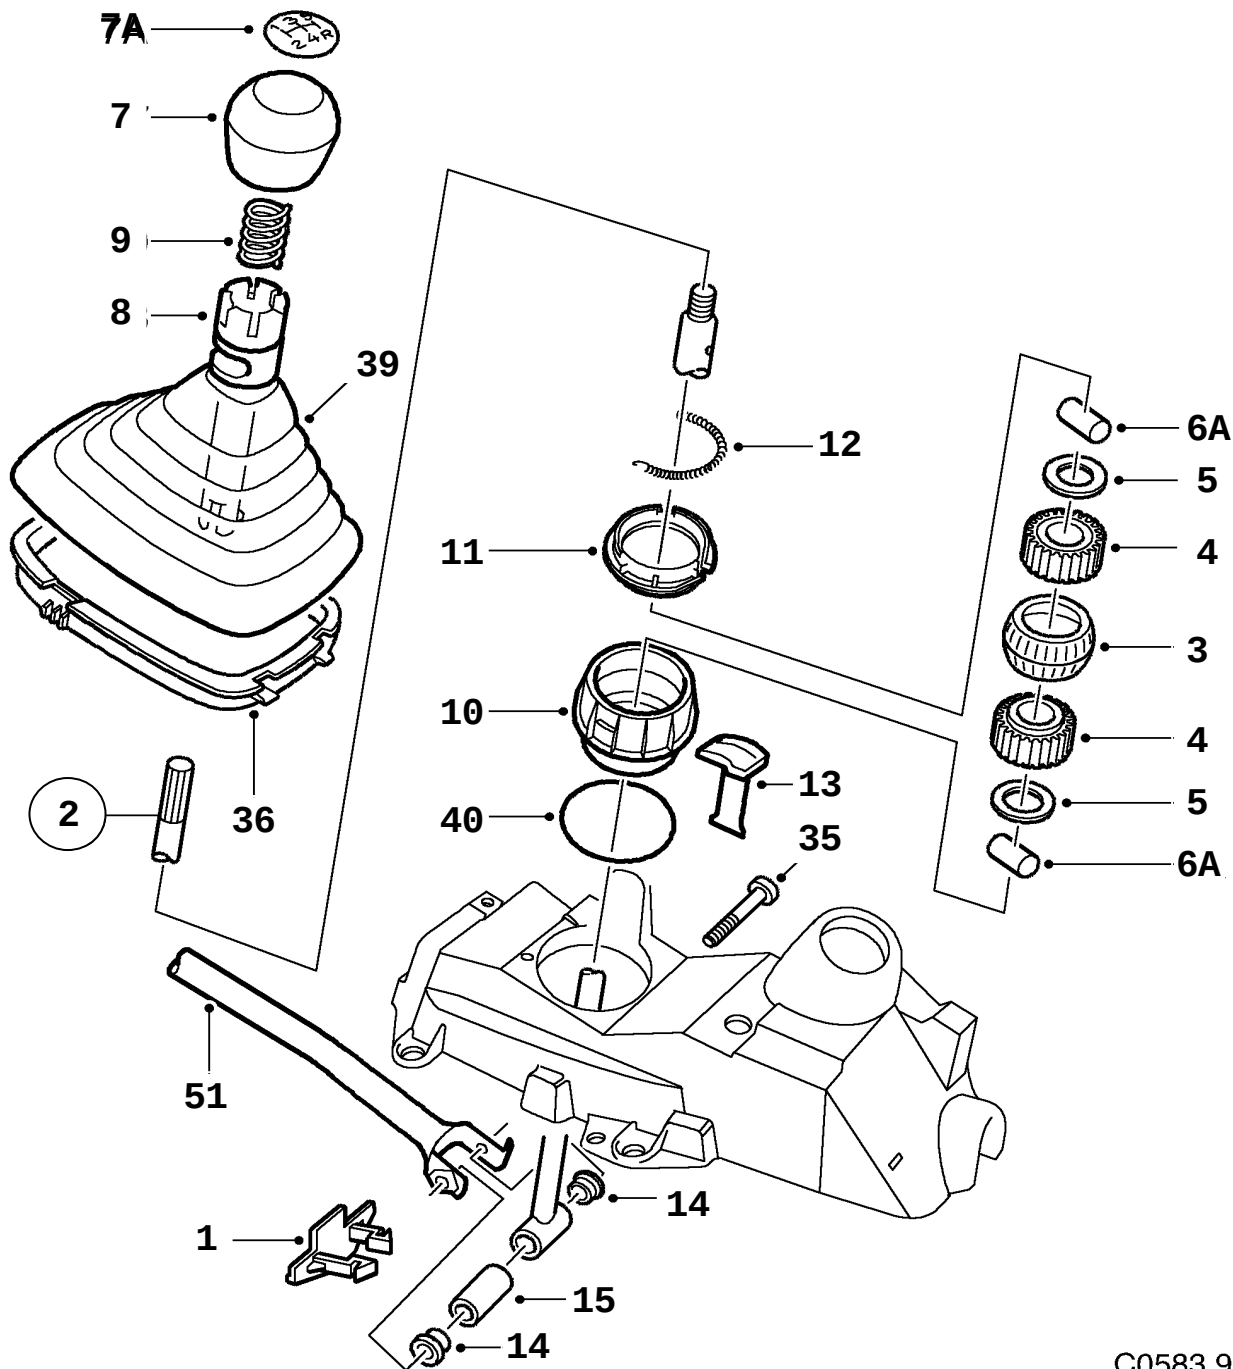

Pos	Pieza Nº.	Artículo	Utilización	Ctd
1	44 91 411	Tope de la palanca		1
2	45 80 015	Palanca de cambios		1
3	40 27 876	•Bola		1
4	40 27 892	•Casquillo		2
5	41 21 588	•Arandela		2
6A	46 85 657	•Pasador		2
7	49 04 405	Botón		1
		Note: Ch. --12035458		
		Ch. --17010171		
7	49 04 413	Botón		1
		cuero		
		Note: Ch. --12035458		
		Ch. --17010171		
7A	75 98 725	•Emblema	Ir a 4 - 670	1
		cuero		
		Note: Ch. --12035458		
		Ch. --17010171		
8	40 27 868	Pieza de arrastre		1
9	44 77 204	Resorte (muelle)		1
10	44 77 824	Asiento de las bolas		1
11	40 27 850	Asiento de las bolas		1
12	40 27 942	Resorte (muelle)		1
13	44 90 314	Bloqueo de retroceso		1
14	75 59 875	Casquillo		2
15	75 77 729	Distanciador		1
35	80 83 966	Tornillo		1
36	43 86 322	Bastidor		1
36	46 26 826	Bastidor		1
		cuero		
39	42 82 901	Protección (fuelle)		1
39	46 25 471	Protección (fuelle)		1
		cuero		
		Note: Ch. --12042822		
		Ch. --17013470		
40	79 67 912	Anillo tórico		1
51		Varilla del cambio	Ir a 4 - 400	