


Saab 9-3 SS 70/4 Audio System

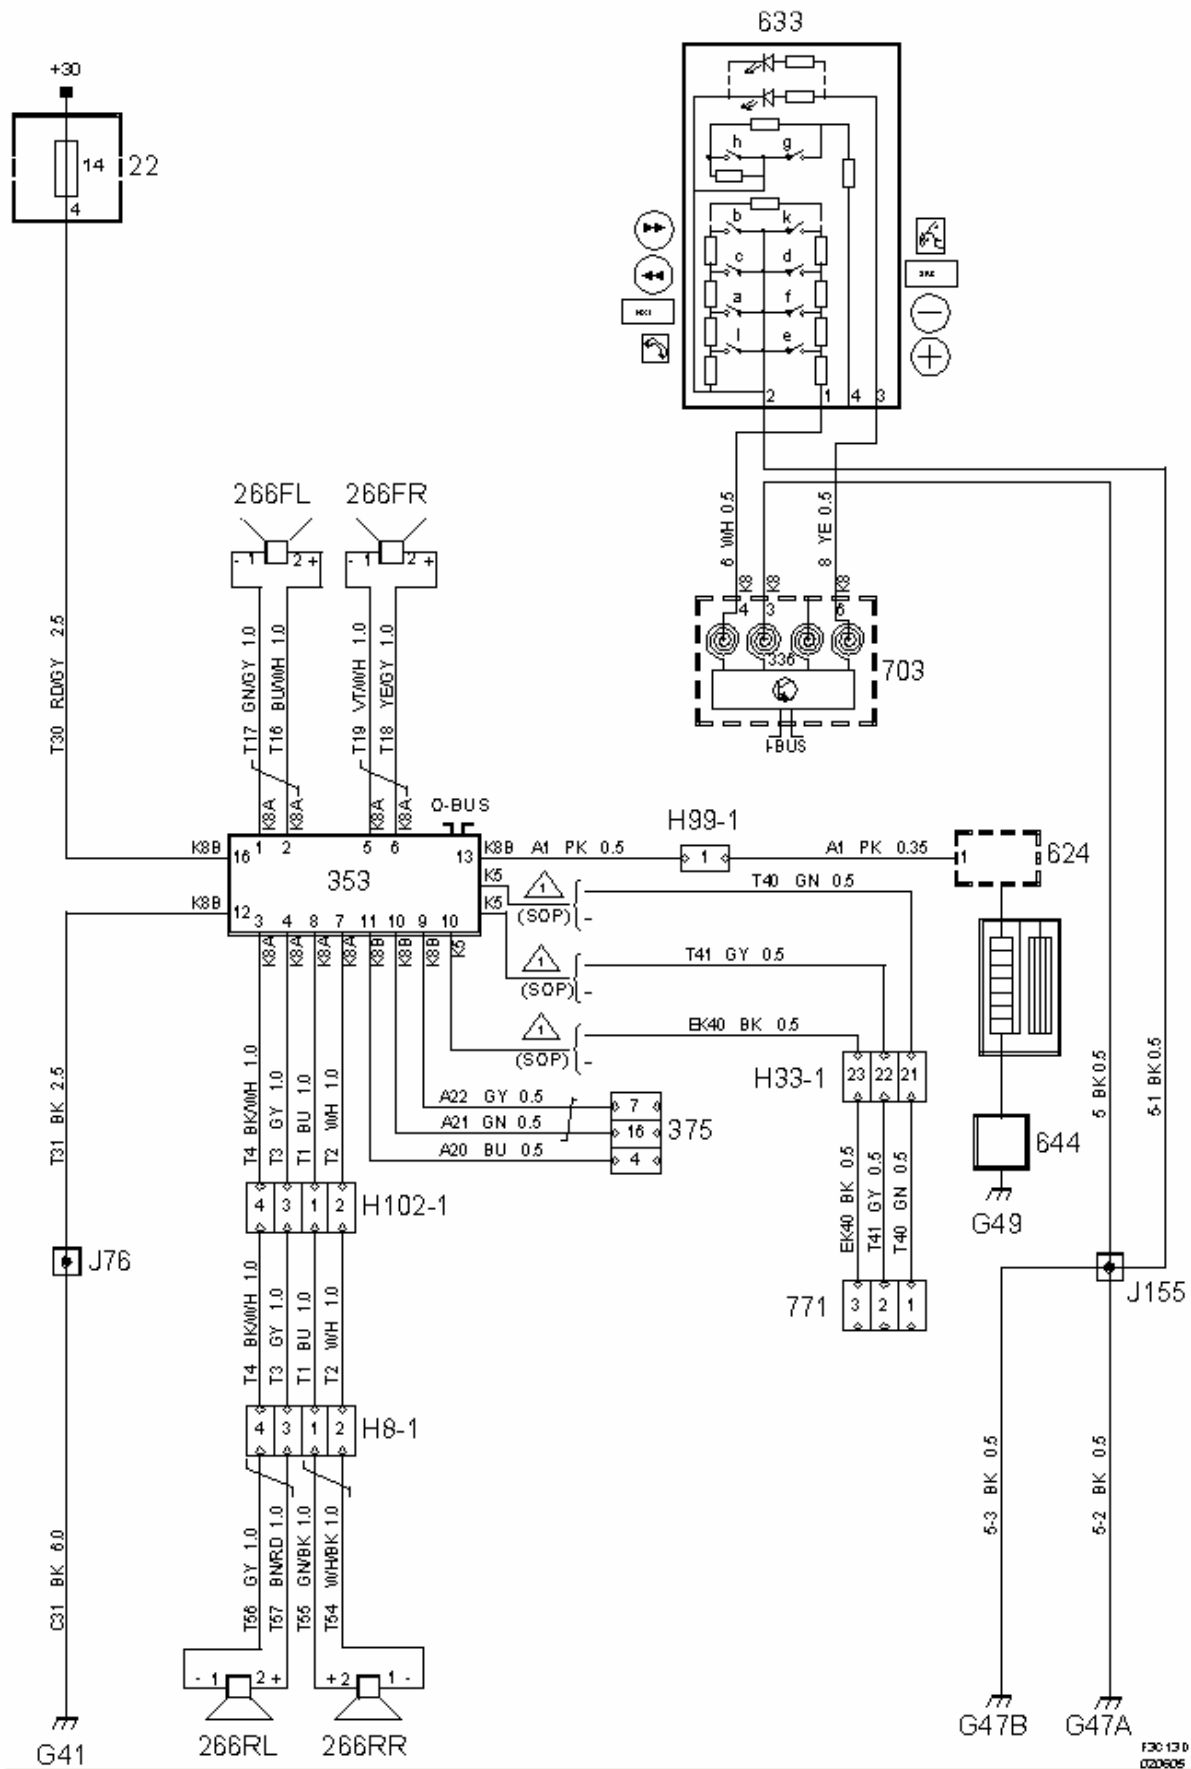

Components

- 22 Main fuse box, dashboard, on the short side of the dashboard by the left door
- 266FL Left dashboard speaker, to the left in dashboard
- 266FR Right dashboard speaker, to the right in dashboard
- 266RL Left parcel shelf speaker, to the left in the parcel shelf
- 266RR Right parcel shelf speaker, to the right in the parcel shelf
- 336 Steering wheel contact unit integrated in the steering column unit
- 353 Main radio unit, in the centre console
- 375 Mobile telephone connection, by the radio unit
- 624 Radio antenna amplifier, by the rear window on the right C-pillar
- 625 Radio antenna, window glass, in rear window
- 633 Steering wheel switch unit, on steering wheel rim
- 644 Antenna ground filter, in the ground cable between the left of the rear window and the grounding point
- 703 Column Integration Module, on the steering column below the steering wheel

8-pin connector

- H8-1 Grey connector on the parcel shelf by the left C-pillar

99-pin connector

- H99-1 under the right A-pillar

102-pin connector

- H102-1 Under the left A-pillar

Crimp connections

- J76 **LHD:** Approx. 40 mm from branching point cigarette lighter towards grounding point G41


RHD: Approx. 130 mm from branching point grounding point G43 towards the radio

- J155 Approx. 130 mm from the column integration module

Grounding points

- G41 In the dashboard shaft to the left of the knee member
- G47A in steering wheel
- G47B in steering wheel
- G49 In the left C-pillar

Saab 9-3 SS 150/7 & 300/13 Audio System

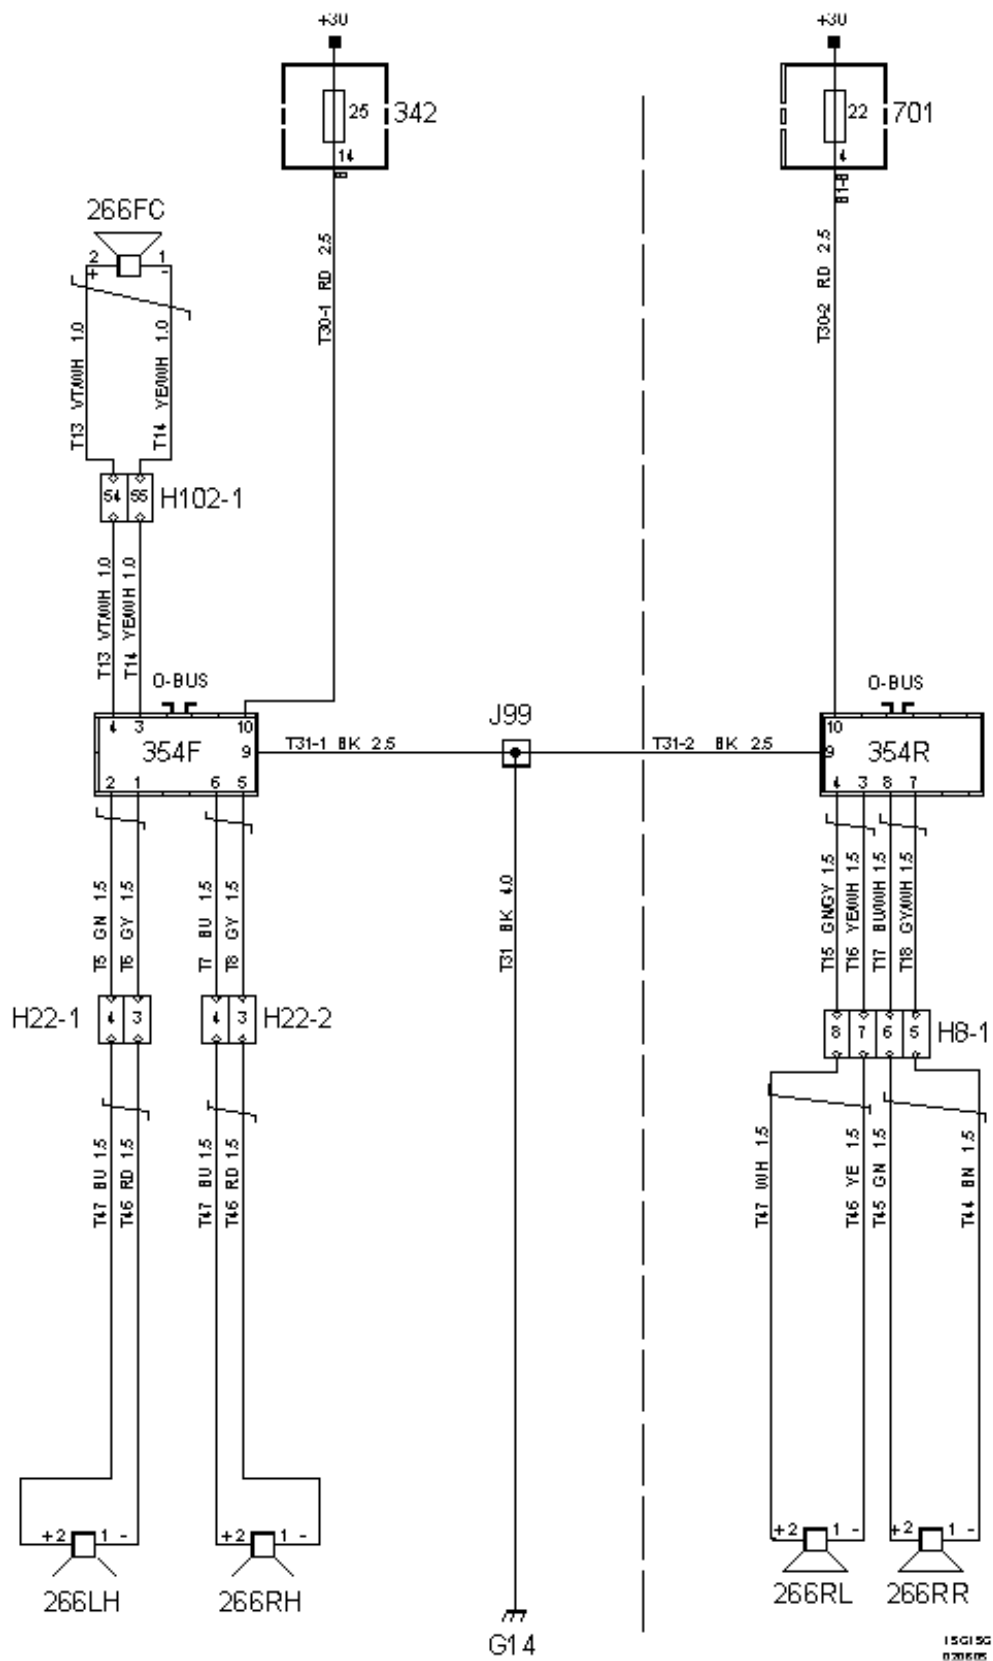

Components

- 266FC Centre dashboard speaker, top centre of dashboard
- 266LH Front left door speaker, in door
- 266RH Front right door speaker, in door
- 266RL Left parcel shelf speaker, to the left in the parcel shelf
- 266RR Right parcel shelf speaker, to the right in the parcel shelf
- 342 Main fuse box, engine bay next to the battery
- 354F Front speaker amplifier, under left-hand seat
- 354R Rear speaker amplifier, behind the rear left wheel housing
- 701 Main fuse box in the luggage compartment on the wall behind the rear left wheel housing

8-pin connector

- H8-1 Grey connector on the parcel shelf by the left C-pillar

22-pin connector

H22-1 In the end of the front left door

H22-2 In the end of the front right door

102-pin connector


- H102-1 Under the left A-pillar

Crimp connections



- J99 Approx. 480 mm from branching point grounding point G33P/S towards rear left door

Grounding points

- G14 By the seat member under the left seat

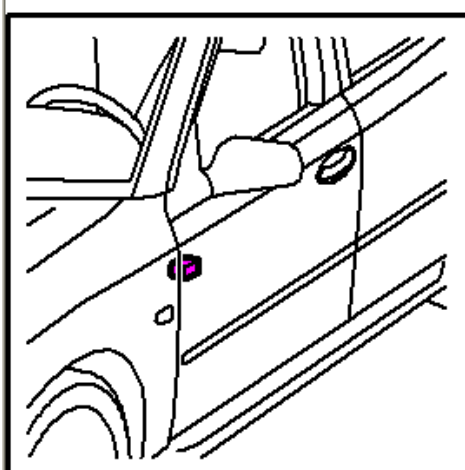

H22-1

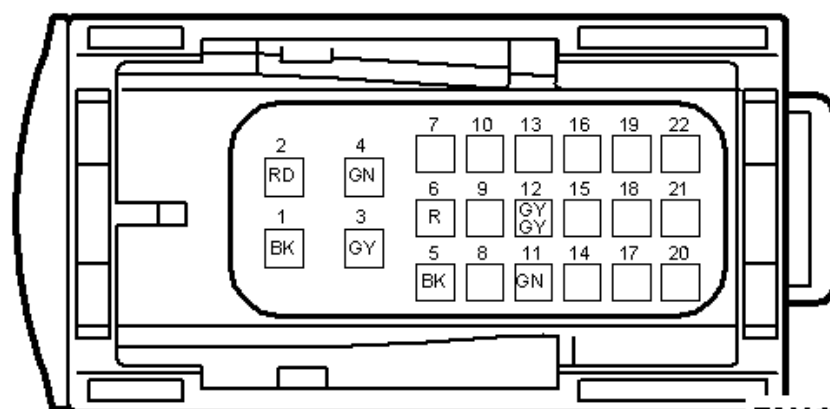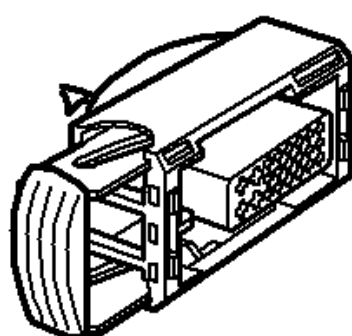

F3XC5D