


Headlining

To remove


- 1 Release the press studs and Velcro fasteners securing the headlining side flaps at the back.




- 2 Undo the zip, release the strap and lower the rear screen.

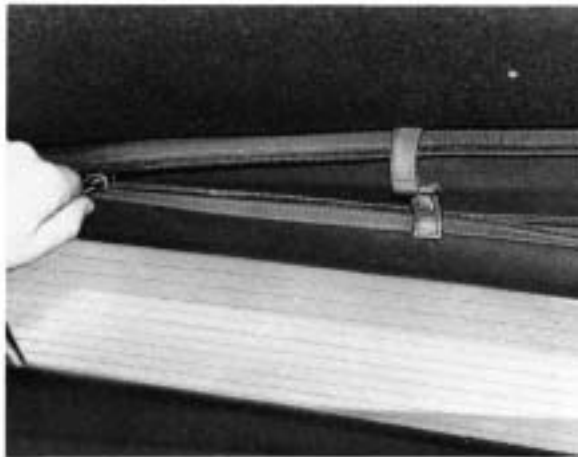

- 3 Undo the retaining screws and remove the strip from the no. 4 top-assembly cross-member.

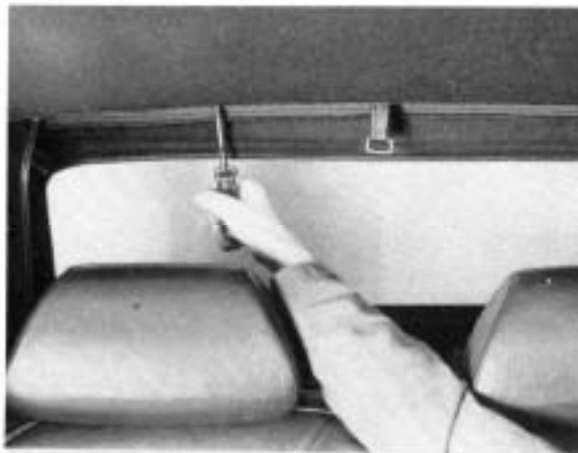


- 4 Pull away the headlining from the adhesive tape holding it in place on the no. 4 crossmember and let it hang free.

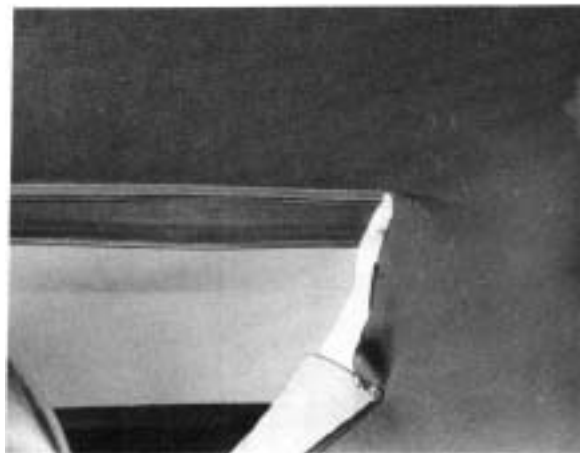

- 5 Mark the position of the cover strip on the no. 3 crossmember and ease the strip off.



- 6 Mark the position of the strip on the no. 2 crossmember and ease the strip off.
- 7 Remove the screws from the finisher strip on the no. 1 top-assembly crossmember.

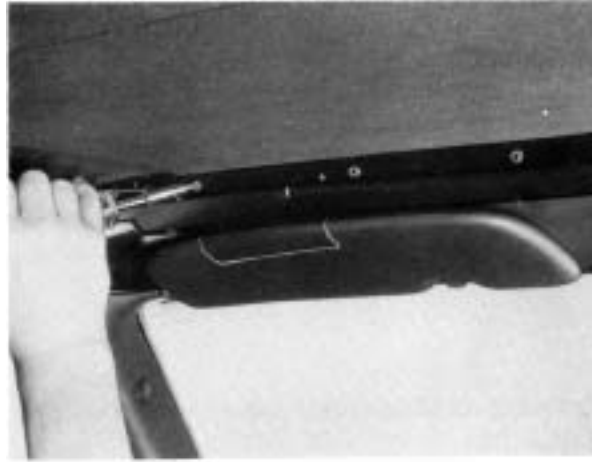

- 8 Release the latching handle and remove the finisher strip (secured by adhesive tape).




- 9 Pull the headlining away from the adhesive tape holding it in position on the no. 1 crossmember and lift it out of the car.




TO fit

- 1 Lift the headlining into position and press the plastic retaining strip onto the no. 2 crossmember of the top assembly. Ensure the strip is positioned centrally by lining up the marks made before the strip was removed.

If a new headlining is being installed, ensure that the retainer strip is equidistant from either end of the no. 2 crossmember.

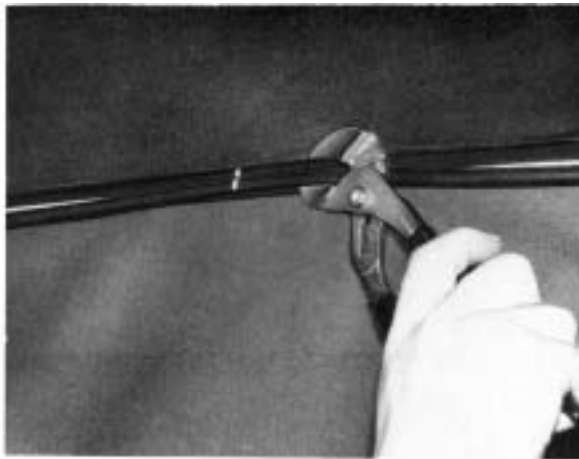

- 2 Using double-sided adhesive tape, press the headlining into position on the no. 1 crossmember and screw the finisher strip into place. Take care to align the finisher if it is bent.

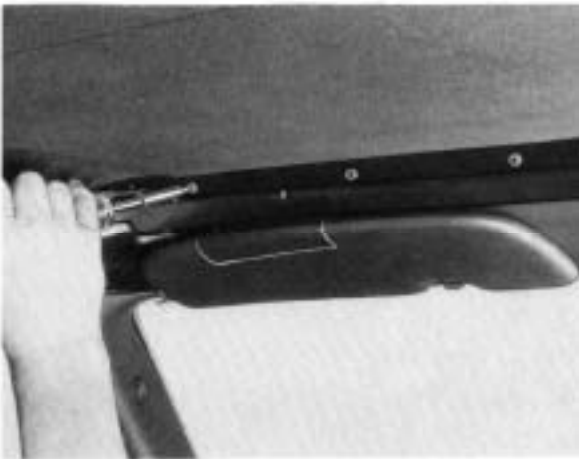

- 3 Press the plastic retainer strip into position on the no. 3 crossmember. Ensure the strip is positioned centrally by lining up the marks made before the strip was removed.


If a new headlining is being installed, ensure that the retainer strip is equidistant from either end of the no. 2 crossmember.



- 4 Press the headlining onto the double-sided adhesive tape on the no. 4 crossmember and screw the metal strip into position. Note that the strap for the rear screen is retained by means of the middle screw.



- 5 Hang the rear screen from the strap and zip up the fastener.

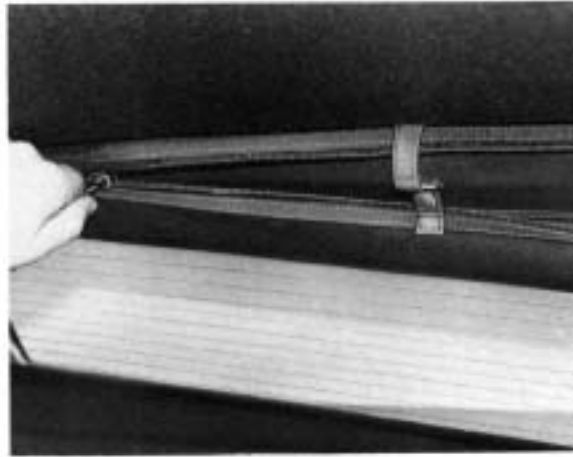

- 6 Secure the headlining side panels at the rear by means of the press studs and Velcro fasteners.

- 7 Secure the Velcro fasteners along the side rails.

