


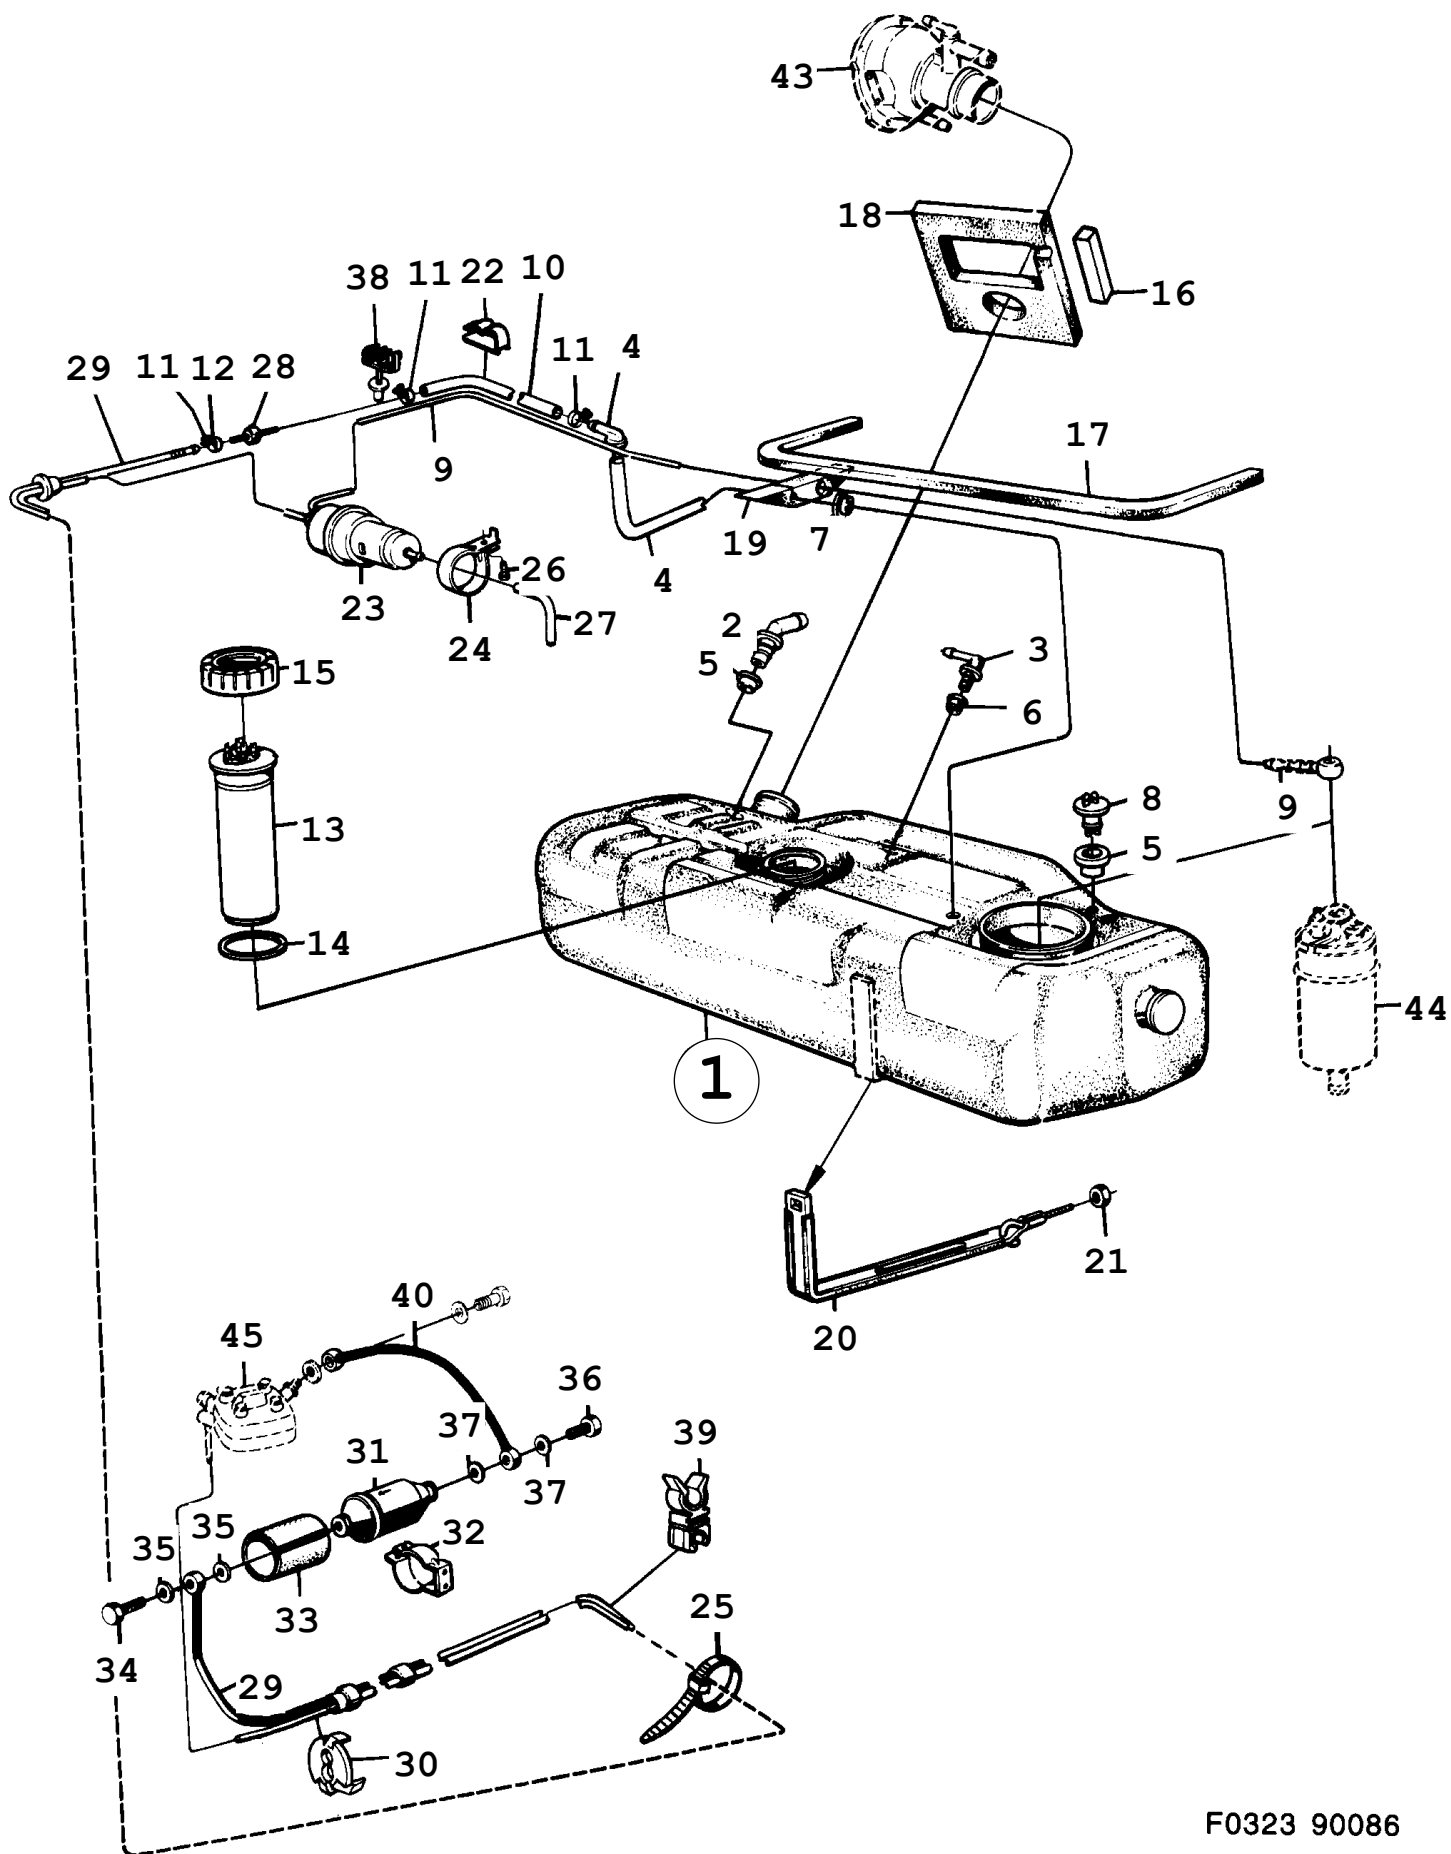

F0323 90086

0730 Fuel system - Fuel tank - engine (1986 - 1988), B201I

Pos	Part No.	Article	Usage	Qty
1	75 27 542	Tank Note: Ch. --G2011367 Ch. --G3008405	CA, FE, JP, ME, US, NLS	1
1	75 34 597	Tank Note: Ch. G2011368-- Ch. G3008406-- Ch. --J3001527 Ch. --J7000897	CA, FE, JP, ME, US, NLS	1
1	75 31 965	Tank Note: Ch. --G2011239	AU, NLS	1
1	75 34 605	Tank Note: Ch. G2011240-- Ch. --J3001527 Ch. --J7000897	AU, NLS	1
1	75 34 605	Tank Note: With catalytic converter. Ch. --J3000891 Ch. --J7000828	NLS	1
1	93 68 838	Tank Note: Ch. --G2012680 Ch. --G3009463 Ch. --G7012942	NLS	1
1	75 34 621	Tank Note: Ch. G2012681-- Ch. G3009464-- Ch. G7012943-- Ch. --J3016429 Ch. --J7001819	NLS	1
2	93 29 491	·Nipple	NLS	1
3	93 28 857	·Connector		1
4	93 62 211	·Return pipe Note: Part of 75 27 542, 75 34 597.	NLS	1
4	93 24 138	·Nipple Note: Part of 75 31 965, 75 34 605, 93 68 838, 75 34 621.	NLS	1
4	89 77 159	·Nipple Note: Part of 89 76 433, 89 76 441.	NLS	1
4	89 76 961	·Nipple Note: Part of 89 76 425.	NLS	1
5	93 24 021	·Bushing		2
6	83 25 656	·Bushing		1
7	83 25 656	·Bushing Note: Part of 75 27 542, 75 34 597, 75 31 965, 75 34 605, 93 68 838, 75 34 621.		1
7	93 24 021	·Bushing		1
8	93 63 524	·Connector	1986, NLS	1
9	75 13 872	Fuel pipe	NLS	1
10	93 63 359	Hose Note: Manufactured by 93 62 781.	L=715 MM, NLS	1
10	89 76 359	Fuel pipe Note: Used together with 8976425, 8976433, 8976441, 8976458.	NLS	1
11	79 68 308	Hose clamp Note: Ch. --J3000891 Ch. --J3001527 Ch. --J3016429 Ch. --J7000828 Ch. --J7000897 Ch. --J7001819		3
12	79 75 204	Hose clamp Note: Ch. --J3000891 Ch. --J3001527 Ch. --J3016429 Ch. --J7000828 Ch. --J7000897 Ch. --J7001819	NLS	1
13	93 61 965	Fuel transmitter	NLS	1

0730 Fuel system - Fuel tank - engine (1986 - 1988), B201I

Pos	Part No.	Article	Usage	Qty
14	93 68 846	Gasket Note: Ch. --G2011239 Ch. --G2011367 Ch. --G2012680 Ch. --G3008405 Ch. --G3009463 Ch. --G7012942	NLS	1
14	93 92 689	Gasket Note: Ch. G2011240-- Ch. G2011368-- Ch. G2012681-- Ch. G3008406-- Ch. G3009464-- Ch. G7012943--	NLS	1
15	93 93 950	Nut	NLS	1
16	85 72 752	Bracket	NLS	2
17	93 49 929	Seal	NLS	1
18	93 49 937	Seal	NLS	1
19	93 29 855	Seal	NLS	1
19	89 76 375	Seal Note: Use together with 89 76 425, 89 76 433, 89 76 441.	NLS	1
20	93 33 600	Tensioning band	NLS	2
21	80 74 288	Nut	NLS-USE 11900440	2
22	93 49 945	Clip	NLS	2
23	75 25 181	Fuel accumulator	NLS	1
24	93 24 815	Clamp	NLS	1
25	79 71 872	Tensioning band	NLS	3
26	79 72 565	Screw Note: Ch. --H7020563 Ch. -H2014003 Ch. -H3011528		1
27	93 28 899	Protective pipe	NLS	1
28	75 25 124	Non-return valve Note: Ch. --J3000891 Ch. --J3001527 Ch. --J3016429 Ch. --J7000828 Ch. --J7000897 Ch. --J7001819	NLS	1
29	75 27 039	Fuel pipe Note: Without catalytic converter. Ch. -J3001527 Ch. -J7000897	NLS	1
29	75 27 047	Fuel pipe Note: Ch. --J3001527 Ch. --J7000897	FE, ME, NLS	1
29	75 26 783	Fuel pipe Note: With catalytic converter. Ch. --J3001527 Ch. --J7000897	NLS	1
30	83 28 346	Bracket	NLS	1
31	83 39 731	Fuel filter Note: Ch. --G3021451 Ch. --H2000676 Ch. --H7002160	NLS	1
31	93 28 519	Fuel filter Note: With catalytic converter. Ch. --H2017192 Ch. --H3012361 Ch. --H7023610		1
32	93 00 369	Bracket Note: Ch. --G3021451 Ch. --H2000676 Ch. --H7002160	NLS	1
32	93 29 210	Bracket Note: With catalytic converter. Ch. --H2017192 Ch. --H3012361 Ch. --H7023610	NLS	1

0730 Fuel system - Fuel tank - engine (1986 - 1988), B201I

Pos	Part No.	Article	Usage	Qty
33	75 27 518	Insulation Note: Ch. --G3021451 Ch. --H2000676 Ch. --H7002160	NLS	1
34	83 22 927	Banjo bolt	NLS-USE 12773569	1
35	83 26 712	Seal Note: Ch. --J3007293 Ch. --J7008835	NLS-USE 4161162	2
36	83 19 915	Banjo bolt	NLS-USE 12794638	1
37	83 26 704	Seal Note: Ch. --J3007293 Ch. --J7008835		2
38	79 63 895	Tube clamp	NLS	2
39	75 11 256	Clamp	NLS	1
40	75 26 833	Fuel pipe	I, TURBO, CA, JP, US, FOR, NLS	1
40	75 26 817	Fuel pipe	TURBO, NLS	1
43		Filler pipe	Goto 2 - 670	
44		Fuel pump	Goto 2 - 820	
45		Fuel volumeter	Goto 2 - 910	
	93 62 781	Hose	L=10M, NLS	X
	88 17 256	Fuel hose	NLS Goto 2 - 2230	X