


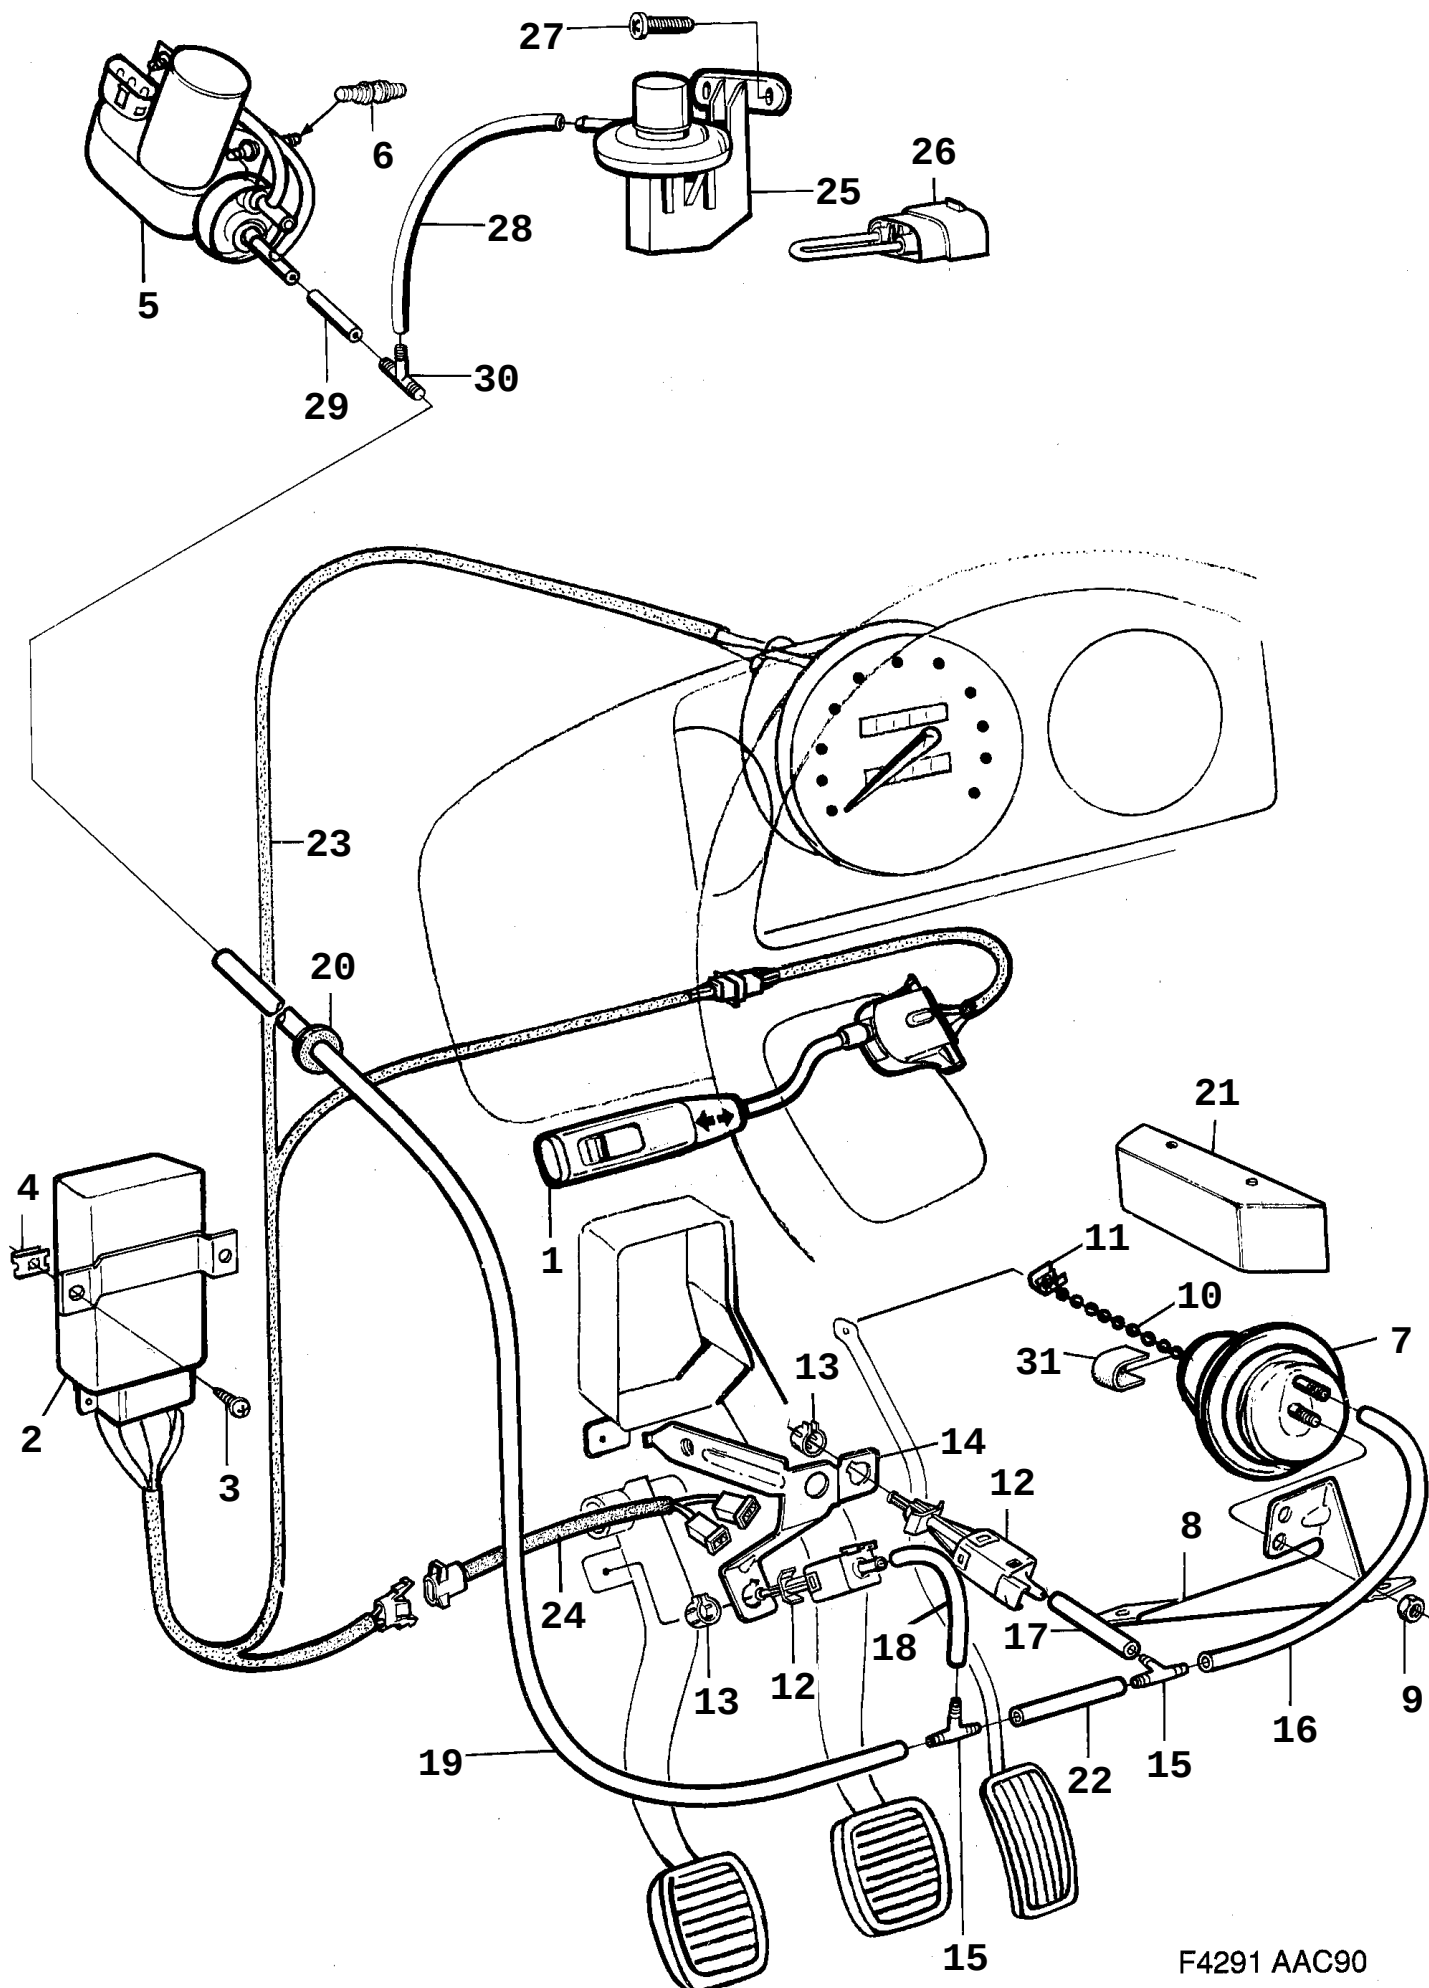

F4291 AAC90

Pos	Pieza N°.	Artículo	Utilización	Ctd
1		Commutador	Ir a 3A - 740	1
2	95 60 905	Unidad electrónica	1990-1991	1
3	79 22 818	Tornillo		2
4	79 72 573	Tuerca de clip		2
5	85 87 024	Bomba de vacío		1
6	95 55 194	•Ménsula		3
7	95 12 302	Regulador de vacío		1
8	95 68 882	Consola		1
9	80 74 288	Tuerca	1990-1992	1
10	40 61 909	Cadena		1
11	85 87 099	Abrazadera	NLS-USE 4433827	1
		Note: Ch. --P1034114		
12	41 08 676	Contacto	1990, M, NLS-USE 4350443	2
12	41 08 676	Contacto	1990, A, NLS-USE 4350443	1
13	85 30 917	Clip		2
14	95 63 149	Consola	NLS-USE 4428355	1
14	41 08 759	Consola	NLS-USE 4428348	1
		Note: Para automóviles con sistema de frenos ABS.		
		Ch. --P2000984		
15	85 09 002	Tubo		2
16	95 66 415	Manguera		1
17	95 66 381	Manguera		2
18	85 87 354	Manguera	NLS-USE 9566381	2
19	95 66 548	Manguera	L=1200 MM	1
20	79 78 042	Casquillo		1
21	85 87 255	Protector		1
22	85 87 347	Manguera	NLS-USE 9566399	1
22	95 66 399	Manguera	M	1
23	95 68 742	Cableado	LHD	1
		Note: Ch. --M5004703		
		Ch. --M7010506		
23	95 68 536	Cableado	1990, TURBO, LHD, EU, FE, FI, JP, 1 ME, SE	1
23	95 68 759	Cableado	RHD	1
		Note: Ch. --M5004703		
		Ch. --M7010506		
23	40 67 484	Cableado	1990-1991, TURBO, RHD	1
		Note: Ch. --M5004703		
		Ch. --M7010506		
24	91 20 239	Cableado	1990-1991, M, NLS	1
		contacto		
24	91 20 247	Cableado	1990-1991, A, NLS	1
		contacto		
25	85 98 195	Contacto de vacío	B202	1
25	95 64 865	Contacto de vacío	B202TURBO	1
26	85 98 526	Cableado	B202	1
		Note: Sin sistema velocidad de crucero.		
27	79 22 818	Tornillo	B202	2
28	95 66 415	Manguera	B202	1
28	95 66 423	Manguera	TURBO	1
29	85 87 354	Manguera	B202, NLS-USE 9566381	1
29	95 66 381	Manguera	TURBO	1
30	85 87 107	Tubo múltiple	B202, NLS	1